


- NOTES:**
- 1- RIPRAP STONES SHALL BE INSTALLED WITH NO SIGNIFICANT VOIDS, AS GOOD PRACTICE REQUIRES.
 - 2- TAPER SECOND LAYER SO REPAIRED AREA BLENDS INTO THE SURROUNDING RIPRAP.

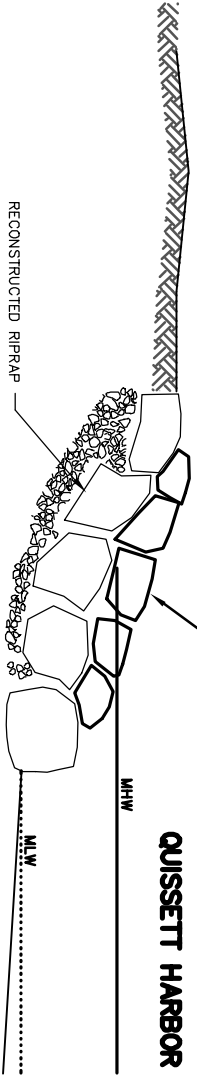

FURNISH AND INSTALL SECOND LAYER OF RIPRAP STONES MINIMUM SIZE TWO TON STONES.

SECTION C-C
SCALE: 1" = 4'